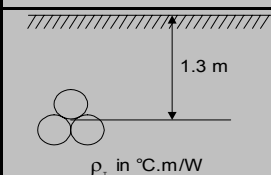
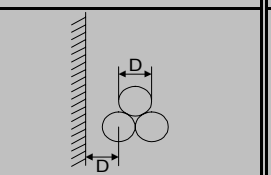
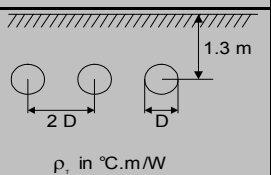
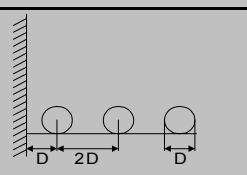


Condizioni di posa per cavi d'alta tensione :

Condizioni di posa : a trifoglio				Condizioni di posa : in piano			
Interrato		In aria		Interrato		In aria	
 <p>ρ_T in °C.m/W</p>				 <p>ρ_T in °C.m/W</p>			
$\rho_T = 1.0$	$\rho_T = 1.2$	$T = 30^\circ\text{C}$	$T = 50^\circ\text{C}$	$\rho_T = 1.0$	$\rho_T = 1.2$	$T = 30^\circ\text{C}$	$T = 50^\circ\text{C}$
$T = 20^\circ\text{C}$	$T = 30^\circ\text{C}$			$T = 20^\circ\text{C}$	$T = 30^\circ\text{C}$		